


INKBIRD

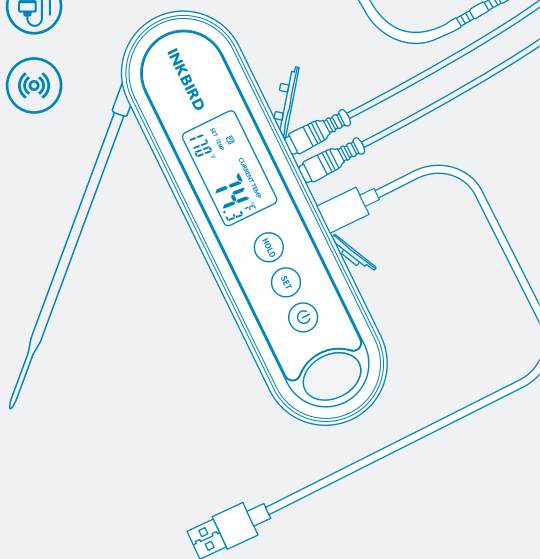

IHT-2PB

***Bluetooth Digital Food
Thermometer
With 2 External Probes***



Warm tips


- To quickly jump to a specific chapter page, click on the relevant text on the contents page.
- You can also use the thumbnail or document outline in the top left corner to quickly find a specific page.

Contents

01	Overview	01
02	Features & Specifications	01
03	Product Diagram	02
04	Connection	03
	• Free App Download	
	• Bluetooth Connection	
05	Key Definition	07
06	Operation Instructions	08
	• App Operating Functions	
	• Menu Instruction	
	• Parameter Setting Guide	
	• Operating Functions Of The Built-In Probe (unplugging the external probes)	
	• BBQ Functions (plugging the external probes)	
07	Q&A About Abnormalities	24
08	Important Notes/Warning	25
09	Product Warranty	26
10	FCC Requirement	26
11	Meat Temperature & Doneness Chart	28

This instant-read Bluetooth food thermometer is designed with 2 sockets for external probes, in addition to a built-in probe. Therefore, it's available to measure temperature via 3 channels simultaneously. Also, you can control the device via Bluetooth on your phone, making it easier and faster to operate. You can use it to measure various food, such as steak, turkey, pork, chicken, fish, and drinks, etc. It helps you cook at a precise temperature for each specific food, a good helper to create perfect meals for your family and friends.

- Product Name: Bluetooth Digital Food Thermometer
- Product Model: IHT-2PB
- About 328 feet (100 meters) of Bluetooth controlling range in an open field
- 3 stainless steel probes for temperature measuring
- Heat-resistant, waterproof probe cables
- Temperature range of probes: -50.0°C-300°C (-58.0°F-572°F)
- Measurement accuracy: $\pm 0.5^{\circ}\text{C}/\pm 1.0^{\circ}\text{F}$
- Readout time (Built-in Probe): 2 seconds
- Support Bluetooth connection
- Auto-off/sleep mode
- Clear backlit LCD Screen
- HOLD function to lock the measured temperature on the LCD screen
- ALARM function to alert you when the measured temperature reaches the present temperature for your food
- Temperature calibration: -4.9°C~4.9°C/-9.9°F~9.9°F
- Waterproof to IPX5
- Rechargeable lithium battery, more convenient to use; It only takes 1 hour to get the battery fully charged.
- Easy to be stored with the attached hook and magnet
- 2-year product warranty

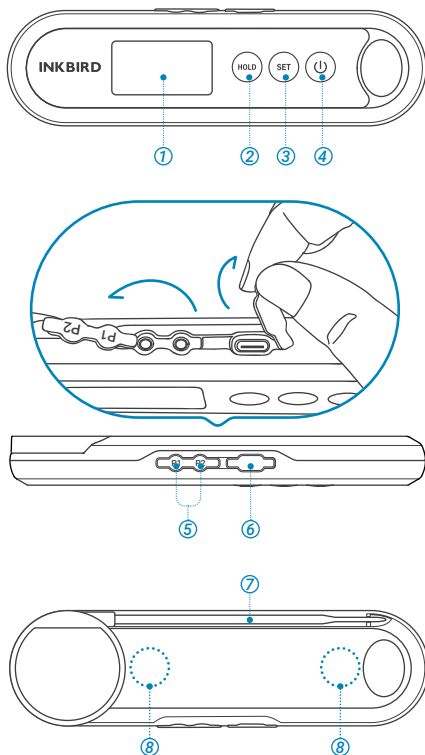

- ① LCD Screen & Backlight
- ② HOLD/UP Button
- ③ SET Button
- ④ POWER/DOWN Button

- ⑤ Probe 1/2 Sockets
- ⑥ Battery Charge Port
- ⑦ Built-in Probe
- ⑧ Magnetic Back

Free App Download

Get INKBIRD APP from Google Play or App Store for free, or you can scan the QR codes below to download the app directly.






INKBIRD APP

Please make sure the following requirements are met to download the apps smoothly:

-Your devices must be running IOS11/Android 5.0 or above to download the app.

Bluetooth Connection

A

Press the  button to turn on the device. You will see the Bluetooth icon  flashing, which means the application is searching to connect. When the Bluetooth icon  is on, Bluetooth is connected.

12:30



Add Device

All Devices

Temperature control

Humidity



ITC-308-WIFI



C929



ITC-306A



C929-A



IHC-200-WIFI



ITC-306T-WIFI



IBBQ-4T



IBS-M1



ISC-007BW



ISV-100W



IPB-16SW



IPT-2CH



ISV-200W



IIC-800-WIFI



IWS-WD1



BG-BT1X



IHT-2PB



IBT-4RT




IBT-24S



BBQ-4BW


B

Now you can add the device needed. Click “+” in the top right corner to add the device.

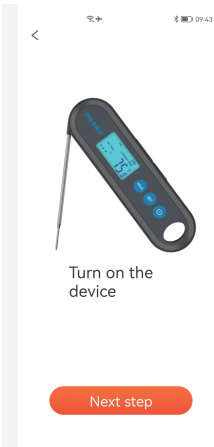


C

Turn on the device.
Make sure the
Bluetooth icon is
flashing.

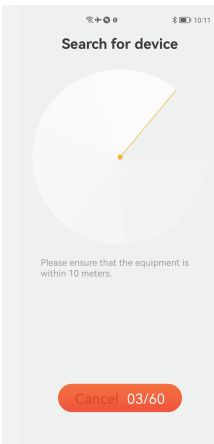

D

Search for device,
please ensure that
the equipment is
within 10 meters.




Click the SET button to complete the connection

Cancel 08/30

E

APP matching: The devices need to authorize the match. Click the SET button of the device IHT-2 PB to agree on authorization and allow the application to match the device.



Pairing success

CONGRATULATION

Cancel 12/20

F

Connect successfully.




SET Press and hold the button for 2 seconds to enter the menu for function setting. During the setting process, press the button to choose functions; press and hold the button for 2 seconds to quit and save setting changes.

Power Press the button to turn on the device. In normal mode, press and hold the button for 2 seconds to turn off the device. In setting mode, press the button to decrease the value of parameters; long press the button to quickly decrease the value of parameters.


HOLD In normal mode, press the button to lock or unlock the value of current temperature; press and hold the button for 3 seconds to switch the display of 3 channels. In setting mode, press the button to increase the value of parameters; long press the button to quickly increase the value of parameters.

App Operating Functions

• Operation Interface

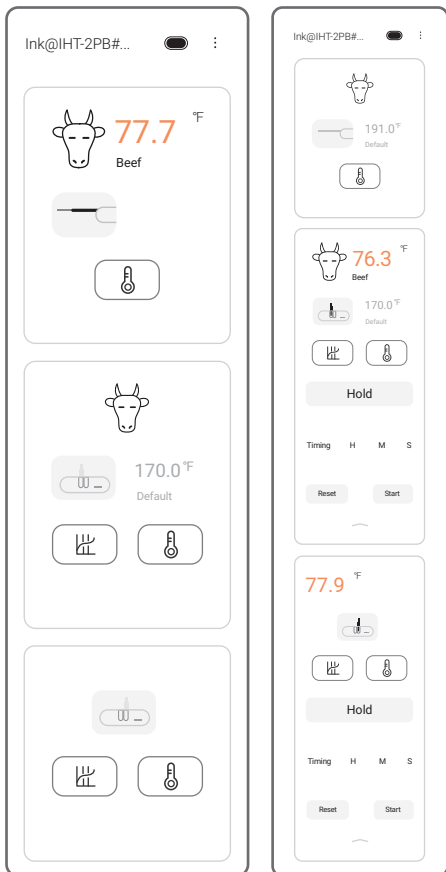

• **Setting Menu**

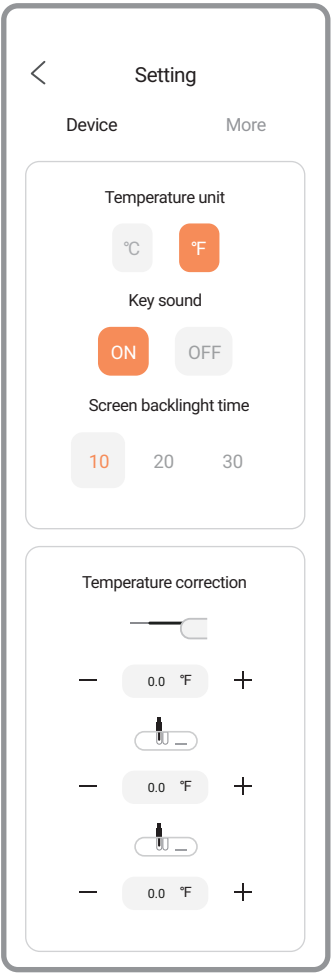

- **More Settings**

<

Setting

Device

More

Need a pop-up notification about temperature?

ON

OFF

ON

OFF

ON

OFF

Modification of equipment name

Ink@IHT-2PB#366

REMOVE THE DEVICE

MAC

62:00:A1
:1C:4F:
14

vision

1.0.8

- 10 -


Menu Instruction

MENU ITEMS	DIS-PLAY	FUNCTIONS	SETTING RANGE	DEFAULT VALUES
CF	CF	Celsius/ Fahrenheit	C/F	F
BEE	BEE	Key sound	ON or OFF	ON
BLT	BLT	Backlight active time	5~60S	10S
ALM	ALM	Alarm function for the built-in probe	ON/OFF	OFF
TS	TS	Alarm value for the built-in probe	-50.0°C~300°C	77.0°C
			-58.0°F~572°F	170°F
CA	CA	Temperature calibration for the built-in probe	-4.9°C~4.9°C	0.0°C
			-9.9°F~9.9°F	0.0°F
ALM1	ALM1	Alarm function for the external probe1	ON or OFF	ON
TS1	TS1	Alarm value for the external probe1	-50.0°C~300°C	77.0°C
			-58.0°F~572°F	170°F
CA1	CA1	Temperature calibration for the external probe1	-4.9°C~4.9°C	0.0°C
			-9.9°F~9.9°F	0.0°F
ALM2	ALM2	Alarm function for the external probe2	ON or OFF	ON
TS2	TS2	Alarm value for the external probe2	-50.0°C~300°C	77.0°C
			-58.0°F~572°F	170°F
CA2	CA2	Temperature calibration for the external probe2	-4.9°C~4.9°C	0.0°C
			-9.9°F~9.9°F	0.0°F

Parameter Setting Guide

Temperature Display Unit of °C/°F

Step 1: press and hold **SET** button for 2 seconds to enter the menu for function setting, then press the button to choose CF function.

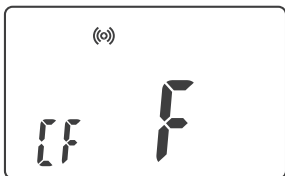

Step 2: press **HOLD** or **POWER** button to choose °C or °F.

NOTE: All parameters will be restored to their default values once you change the temperature unit.

Step 3: press and hold **SET** button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

Key Sound

Step 1: press and hold **SET** button for 2 seconds to enter the menu for function setting, then press the button to choose BEE function.



Step 2: press **HOLD** or **POWER** button to choose ON or OFF.

Step 3: press and hold **SET** button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

Backlight Active Time

Step 1: press and hold **SET** button for 2 seconds to enter the menu for function setting, then press the button to choose BLT function.



Step 2: press **HOLD** or **⏻** button to increase or decrease the value; long press **HOLD** or **⏻** button to quickly increase or decrease the value. (The active time of the backlight is adjustable from 5 to 60 seconds.)

Step 3: press and hold **SET** button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

Alarm Function for the Built-in Probe


Step 1: press and hold **SET** button for 2 seconds to enter the menu for function setting, then press the button to choose ALM function.








Step 2: press  or  button to choose ON or OFF.

Step 3: press and hold  button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

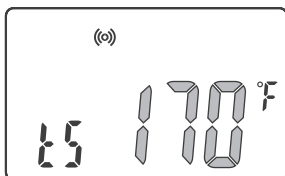Alarm Value Setting for the Built-in Probe


Step 1: press and hold  button for 2 seconds to enter the menu for function setting, then press the button to choose TS function.







Step 2: press  or  button to increase or decrease the value; long press  or  to quickly increase or decrease the value.

Step 3: press and hold  button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

Temperature Calibration for the Built-in Probe


Step 1: press and hold  button for 2 seconds to enter the menu for function setting, then press the button to choose CA function.




Step 2: press  or  button to increase or decrease the value; long press  or  to quickly increase or decrease the value.


Step 3: press and hold  button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

When the current temperature is 75.5°F, the screen displays 75.8°F after setting the CA value as 0.3°F.

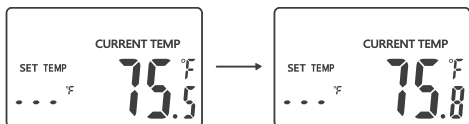


Alarm Function for P1 (the External Probe1)

Step 1: press and hold  button for 2 seconds to enter the menu for function setting, then press the button to choose ALM1 function.

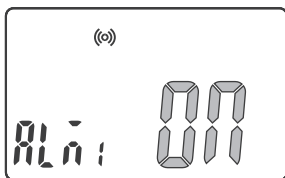


Step 2: press  or  button to choose ON or OFF.

Step 3: press and hold  button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

Alarm Value Setting for P1 (the External Probe1)

Step 1: press and hold **SET** button for 2 seconds to enter the menu for function setting, then press the button to choose TS1 function.

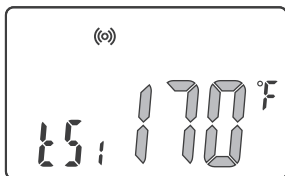


Step 2: press **HOLD** or **UP** button to increase or decrease the value; long press **HOLD** or **UP** to quickly increase or decrease the value.

Step 3: press and hold **SET** button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

Temperature Calibration for P1 (the External Probe 1)


Step 1: press and hold **SET** button for 2 seconds to enter the menu for function setting, then press the button to choose CA1 function.

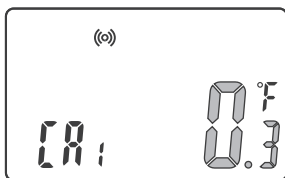

Step 2: press **HOLD** or **UP** button to increase or decrease the value; long press **HOLD** or **UP** to quickly increase or decrease the value.


Step 3: press and hold **SET** button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

When the current temperature is 75.5°F, the screen displays 75.8°F after setting the CA1 value as 0.3°F.

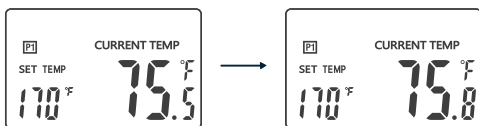

Alarm Function for P2 (the External Probe 2)

Step 1: press and hold **SET** button for 2 seconds to enter the menu for function setting, then press the button to choose ALM2 function.

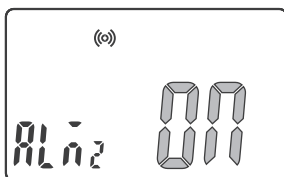


Step 2: press **HOLD** or **POWER** button to choose ON or OFF.

Step 3: press and hold **SET** button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

Alarm Value Setting for P2 (the External Probe2)

Step 1: press and hold **SET** button for 2 seconds to enter the menu for function setting, then press the button to choose TS2 function.

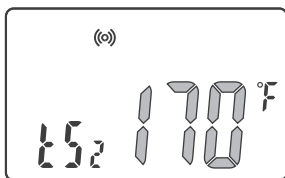


Step 2: press **HOLD** or **⏻** button to increase or decrease the value; long press or to quickly increase or decrease the value.

Step 3: press and hold **SET** button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

Temperature Calibration for P2 (the External Probe 2)


Step 1: press and hold **SET** button for 2 seconds to enter the menu for function setting, then press the button to choose CA2 function.

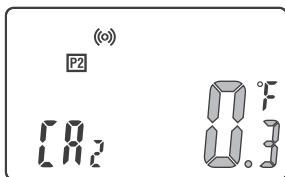

Step 2: press **HOLD** or **⏻** button to increase or decrease the value; long press **HOLD** or **⏻** to quickly increase or decrease the value.

Step 3: press and hold **SET** button for 2 seconds to quit and save changes. (All changes will be automatically saved if there is no operation in 30 seconds.)

When the current temperature is 75.5°F, the screen displays 75.8°F after setting the CA2 value as 0.3°F.

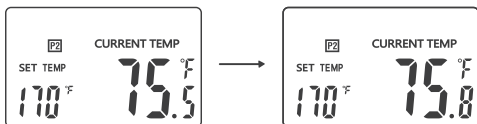


Operating Functions Of The Built-In Probe (unplugging the external probes)


Screen Display

Without plugging the external probes, the built-in probe is the current channel. The LCD screen displays data of the current channel in priority.

When ALM=ON (the alarm function is on), the screen displays SET TEMP and the alarm value of the probe.

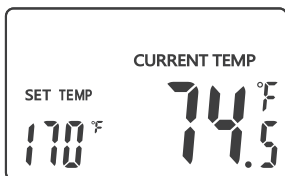

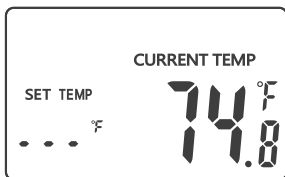

When ALM=OFF (the alarm function is off), the screen displays SET TEMP and " . . . ".



Turn ON/OFF

Automatically: The device is automatically turned on by unfolding the built-in probe. It is turned off when you fold the probe back.


Manually: Press  button to turn on the device. Regardless of the probe being folded or unfolded, you can press and hold  button for 2 seconds to turn off the device.

Auto Reboot: In probe being unfolded state, the device will automatically sleep if there is no operation or no dynamic of current temperature over 3 minutes. In that situation, if the temperature suddenly changes, the device will automatically return to work.

Alarm Function

When you set ALM as OFF, the alarm function is off, and the screen only displays the current measured temperature.

When you set ALM as ON, the alarm function is on, and the screen displays the alarm value (TS) and the current measured temperature.

A  symbol will appear on the screen if the current temperature reaches the alarm value (TS). Meanwhile, the device will alarm you with a “bi-bi-bi” sound repeating at an interval of 2 seconds. And the backlight will keep active for 60 seconds.

How To Cancel The Alarm: ① Press any button to cancel the alarm; ② The alarm will automatically stop if the temperature goes lower than the alarm value.

Backlight

Backlight helps you check data conveniently. Without any operation, the backlight will keep activated for the time of BLT parameter, then be off automatically . You can press any button to activate it when it's off. If you unfold the probe, the backlight will be activated automatically when the probe detects a temperature change.


BBQ FUNCTIONS

(plugging the external probes)


Screen Display

When you plug the external probe P1, the P1 probe is the current channel. The LCD screen displays data of the current channel in priority. P1 symbol appears on the screen.

When ALM1=ON (the alarm function of P1 probe is on),the screen displays SET TEMP and the alarm value of P1 probe.

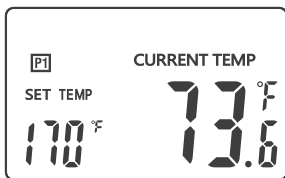


When ALM1=OFF (the alarm function of P1 probe is off),the screen displays SET TEMP and " . . . ".

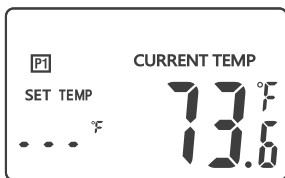


When you plug the external probe P2, the P2 probe is the current channel. The LCD screen displays data of the current channel in priority. P2 symbol appears on the screen.


When ALM2=ON (the alarm function of P2 probe is on),the screen displays SET TEMP and the alarm value of P2probe.

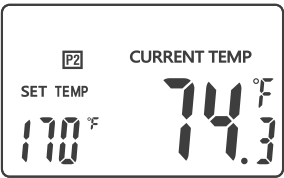

When ALM2=OFF (the alarm function of P2 probe is off),the screen displays SET TEMP and " . . . ".

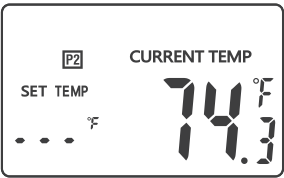


When you plug both external probes simultaneously, both external probes are current channels. The LCD screen alternately displays data of both external probes at a frequency of 0.5Hz.

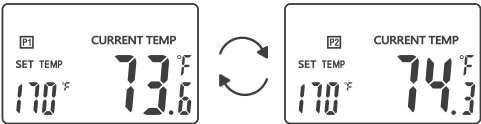

Alarm 1&2 Function

When you set ALM1 (or ALM2) as OFF, the alarm function of P1 (or P2) probe is off, and the screen only display the current measured temperature.

When you set ALM1 (or ALM2) as ON, the alarm function of P1 (or P2) probe is on, and the screen displays the alarm value of P1(or P2) probe (TS1/2) and the current measured temperature.

A  symbol will appear on the screen if the current temperature reaches the alarm value (TS1/TS2). Meanwhile, the device will alarm you with a “bi-bi-bi” sound repeating at an interval of 2 seconds. And the backlight will be activated for 60 seconds.

How To Cancel The Alarm:

- ① Press any button to cancel the alarm;
- ② The alarm will automatically stop if the temperature goes lower than the alarm value.

Note:


When you use the external probes, please

1. Place the external probes inside the oven if you use an oven;
2. Make sure the external probes are inserted into the thickest center part of the meat; Avoid bones and fat;
3. Make sure the probe cables stay away from extrusion and fire;
4. Place or hang the thermometer away from the fire.

Backlight

Backlight helps you check data conveniently. Without any operation, the backlight will keep activated for the time of BLT parameter, then be off automatically . You can press any button to activate it when it's off. If you unfold the probe, the backlight will be activated automatically when the probe detects a temperature change.

Display Switch Over

Press and hold  button for 3 seconds to switch to display data of the built-in probe. The screen will automatically return to display data of the current channels in 20 seconds if there is no more manual switchover.

07

Q&A About Abnormalities

Q1: What can you do if the screen displays “Er”, “—” or other abnormal values?

Answer: Please contact INKBIRD in time.

Q2: What can you do if the screen do not display any value about P1 after inserting an external probe into the P1 jack?

Answer: Please do as follows:

- unplug the external probe;
- insert it into the P1 jack again with steady force;
- rotate the jack plug to make sure that it has good contact with the P1 jack.

If the display problem is still unsolved, or the screen displays “Er1”, please contact INKBIRD.

Q3: What can you do if the screen do not display any value about P2 after inserting an external probe into the P2 jack?

Answer: Please do as follows:

- unplug the external probe;
- insert it into the P2 jack again with steady force;
- rotate the jack plug to make sure that it has good

contact with the P2 jack.

If the display problem is still unsolved, or the screen displays "Er2", please contact INKBIRD.

Q4: Why can't you turn on/off the thermometer by folding/unfolding the probe?

Answer: Please make sure both external probes are not plugging in both jacks. The unfold-to-turn-on function can only work without external probes.

Q5: Can you use the thermometer while the battery is charging?

Answer: Yes.

08

Important Notes/Warning

- Please do not allow the probes or the probe cables to touch the fire, or it may result in burning and fusing.
- Please insert the probe deep enough into the meat if the display reading value is too high or increases too quickly. To detect the temperature of the meat, probes should be inserted into the thickest part of the meat. Avoid bones and fat.
- Please wear gloves when you clean or use the probes. Do not touch the probes or cables immediately after use, or it may result in scalding or stab wounds.
- Please keep the probes away from children to avoid possible harm.
- Please clean and air-dry the probes after use.
- Please do not immerse the thermometer in the water, though it can be rinsed with water.
- Please do not clean the jack plug of each probe with water, or it may cause bad contact.
- Please do not use the stainless steel probes in

microwave ovens.

- Please do not use the product beyond the temperature range from -50°C to 300°C (-58°F to 572°F), or it may cause damages.
- Children aged 12 or under 12 should use it with parental guidance.

09

Product Warranty



This item carries a 2-year warranty against defects in either components or workmanship. During this period, products that prove to be defective will, at the discretion of INKBIRD, be either repaired or replaced without charge.

10

FCC Requirement



changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



Meat Temperature & Doneness Chart

MEAT	Rare	M.Rare	Medium	M.Well	Done
Beef	49°C/ 120°F	54°C/ 130°F	60°C/ 140°F	66°C/ 150°F	77°C/170°F
Veal	49°C/ 120°F	54°C/ 130°F	60°C/ 140°F	66°C/ 150°F	77°C/170°F
Lamb	49°C/ 120°F	54°C/ 130°F	60°C/ 140°F	66°C/ 150°F	77°C/170°F
Pork					63°C/145°F
Chicken					74°C/165°F
Turkey					74°C/165°F
Fish					63°C/145°F
Hambur- ger					75°C/167°F
BBQ Smoke					102°C~110°C/ 216°F~230°F
Hot Smoke					52°C~80°C/ 126°F~176°F
Cold Smoke					20°C~30°C/ 68°F~86°F

INKBIRD TECH.C.L.

Support@inkbird.com

Factory address: 6th Floor, Building 713, Pengji Liantang Industrial Area, NO.2 Pengxing Rd, Luohu District, Shenzhen, China

Office address: Room 1803, Guowei Building, NO.68 Guowei Rd, Xianhu Community, Liantang, Luohu District, Shenzhen, China



V5.0