

**INKBIRD**

SMART HOME SMART LIFE

**ITH-20R**

---

Manual



Please keep this manual properly for reference. You can also scan the QR code below to visit our official web site for product usage videos. For any usage issues, please feel free to contact us at **support@inkbird.com**.

Wenn Sie eine Bedienungsanleitung in deutscher Sprache benötigen, scannen Sie bitte den QR-Code und besuchen Sie unsere Website, um sie zu erhalten und ein Video über die Verwendung des Produkts zu sehen.

Se avete bisogno di un manuale di istruzioni in italiano, scansionate il codice QR e visitate il nostro sito web per ottenerlo e vedere un video su come utilizzare il prodotto. Si vous avez besoin d'un mode d'emploi en français, veuillez scanner le code QR pour visiter notre site officiel afin d'obtenir et de visionner la vidéo d'utilisation du produit ! Als je een Nederlandstalige handleiding nodig hebt, scan dan de QR-code om naar onze officiële website te gaan en bekijk de video over het gebruik van het product!

Si necesita el manual de instrucciones en español, escanee el código QR para ir a nuestro sitio web oficial y ver el vídeo sobre cómo utilizar el producto.



### ***Warm tips***

- To quickly jump to a specific chapter page, click on the relevant text on the contents page.
- You can also use the thumbnail or document outline in the top left corner to quickly find a specific page.

**01**

Get to know the product - - - - -1

**02**

Function Parameter - - - - -2

**03**

Button Icon Description - - - - -4

**04**



Synchronization and reset  
of Temperature and Humidity  
Monitor and Wireless Remote  
Sensor - - - - -8

**05**


Troubleshooting Guide - - - - -13

## 01 | Get to know the product


### ● Temperature and Humidity Monitor (Receiver)

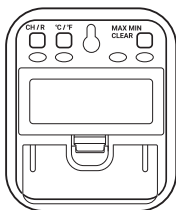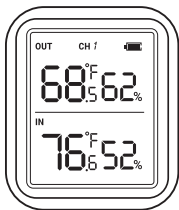

### ● Wireless Remote Sensor (Transmitter)

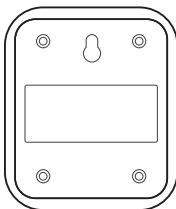

- **External Probe for wireless remote sensor**



External probe with cable


## 02 | Function Parameter

- **Battery:** 2XAAA 1.5V (Temperature and Humidity Monitor/wireless remote sensor)
- **433Mhz Transmission Frequency**
- **Transmission distance:** up to 300ft/90m in open space, if there is interference, the transmission distance will be limited
- **wireless remote sensor support up to three channels and Rain-proof** (The unit can be used at outdoor remote when raining. While cannot be submerged in water)
- **Temperature and Humidity Monitor**  
temperature measurement range:  
-20°C ~ 60°C (-4°F ~ 140°F)

- wireless remote sensor temperature measurement range:  $-40^{\circ}\text{C} \sim 70^{\circ}\text{C}$  ( $-40^{\circ}\text{F} \sim 158^{\circ}\text{F}$ )
- wireless remote sensor external probe temperature measurement range:  $-50^{\circ}\text{C} \sim 125^{\circ}\text{C}$  ( $-58^{\circ}\text{F} \sim 257^{\circ}\text{F}$ )
- wireless remote sensor supports external probe and built-in temperature probe using simultaneously
- Temperature display accuracy:  $0.1^{\circ}\text{C}$  ( $0.1^{\circ}\text{F}$ )
- Temperature measurement accuracy:  $\pm 1.0^{\circ}\text{C}$  ( $\pm 1.8^{\circ}\text{F}$ )
- Humidity measurement range:  $10\% \sim 95\%$
- Humidity measurement accuracy:  $\pm 5\%$
- Humidity display accuracy:  $1\%$
- Temperature and humidity sampling period: 10 seconds
- Temperature and humidity maximum and minimum recording interval can support ALL-TIME or 24 hours, start recording time of ALL-TIME or 24-hour is from the power-on time or the last clear maximum/minimum time
- Out of range display "HH.H" or "LL.L"
- Warranty: 1 year

## 03 | Button Icon Description

### ● Button Icon Description

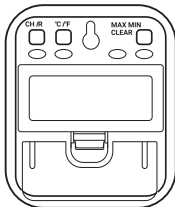

### **CH/R:**

**Quickly press:** When there are multiple wireless remote sensor, press to switch the current channel (CH1, CH2 or CH3) of the wireless remote sensor, and the wireless remote sensor can be fixed in the current channel. When switching to "CH8", after 5s, the temperature and humidity of wireless remote sensor will be displayed in turn, each will show 5



seconds. (Note: Up to 3 wireless remote sensors can be connected, CH1 = wireless remote sensor 1, CH2 = wireless remote sensor 2, and CH3 = wireless remote sensor 3)

Long press (5s): It can reset the synchronization between the Temperature and Humidity Monitor and all wireless remote sensor. After resetting, the wireless remote sensor needs to be re-powered (Re-install the battery) before it synchronize with the Temperature and Humidity Monitor. (The Temperature and Humidity Monitor and the wireless remote sensor can be synchronized within 2 minutes after the wireless remote sensor is re-powered on), when synchronizing, try to make the wireless remote sensor close to the Temperature and Humidity Monitor and please do not press any button.

## °C/°F:

Quickly press:

1. When in normal working mode, press to switch temperature unit to °C or °F.
2. When the display is showing the maximum minimum temperature and humidity (press


**MAX/MIN/CLEAR** button to display the maximum minimum temperature and humidity), press to switch the maximum and minimum recording time interval of temperature and humidity to ALL-TIME or 24 hours.

## **MAX/MIN/CLEAR:**

**Quickly press:** press to display the maximum minimum temperature and humidity. When there is no button operation, the current temperature and humidity display will be restored after 30s.

**Long press (5s):** long press to clear the maximum minimum temperature and humidity record value, then re-record.

## ● wireless remote sensor (Transmitter)

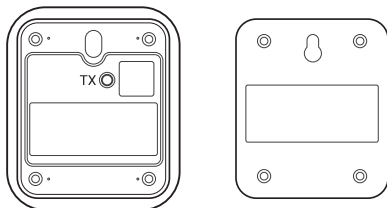

### **TX:**

Quickly press: press to send temperature and humidity data to the Temperature and Humidity Monitor, when the transmission is successful, the red light of wireless remote sensor will flash once.

Long press (5s): reset the synchronization between the wireless remote sensor unit and the Temperature and Humidity Monitor. After resetting, the wireless remote sensor needs to be powered on again to synchronize with the Temperature and Humidity

Monitor, when synchronizing, try to make the wireless remote sensor close to the Temperature and Humidity Monitor. The Temperature and Humidity Monitor and the wireless remote sensor can be synchronized within 2 minutes after the wireless remote sensor is re-powered on (Re-install the battery).

## 04

### **Synchronization and reset of Temperature and Humidity Monitor and wireless remote sensor**


#### **4.1.Synchronization**

- A. The first step is to correctly install the battery of the Temperature and Humidity Monitor to power on.
- B. After Temperature and Humidity Monitor is powered on, then please install battery correctly for wireless remote sensor power on, and try to close the wireless remote sensor to the Temperature and Humidity Monitor. (Note: When

the wireless remote sensor is synchronized with the Temperature and Humidity Monitor, it has to be powered on again (Re-install the battery). Please synchronized within 2 minutes after power-on. After 2 minutes of power-on, it is normal working time, then it cannot be synchronized with the Temperature and Humidity Monitor.)

C. If the battery installation is successful, the Temperature and Humidity Monitor and wireless remote sensor will be powered on normally, and the Temperature and Humidity Monitor and the wireless remote sensor will complete synchronization within 2 minutes. If fail to synchronization, the wireless remote sensor can be re-powered to complete synchronization.

D. Once the Temperature and Humidity Monitor and the wireless remote sensor are synchronized, the wireless remote sensor is successfully registered, the Temperature and Humidity Monitor will display the corresponding wireless remote sensor synchronization channel, and the registration information of the wireless remote

sensor is recorded sensor (After the Temperature and Humidity Monitor is powered off and restarted, it is not necessary to re-synchronize with the wireless remote sensor). When the red light of the wireless remote sensor flashes once, it indicates that the data is successfully transmitted once, and when the RF signal icon  of the corresponding channel of the wireless remote sensor is light (lighting for 5s), it means the Temperature and Humidity Monitor successfully receives the data once and updates the current temperature and humidity in real time.

## **4.2.Reset synchronization**

- Press and hold the TX button (5s) of wireless remote sensor to reset the synchronization between the wireless remote sensor and the Temperature and Humidity Monitor. If you need to re-synchronize, follow the above steps A~D to synchronize.

- Press and hold the CH/R button (5s) of Temperature and Humidity Monitor to reset the synchronization between the Temperature and Humidity Monitor and all the wireless remote

sensors. If you need to re-synchronize, follow the above steps A~D to synchronize.

● After the Temperature and Humidity Monitor and the wireless remote sensor are synchronized, if the Temperature and Humidity Monitor does not receive the data update from the wireless remote sensor of the corresponding channel for a long time (about 10 minutes or more), "--.-" will be displayed.

## FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits

are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



## 05 | Troubleshooting Guide

Issues	Causes	Solutions
Inaccurate temperature reading.	<ol style="list-style-type: none"><li>1. It is placed in a area with poor temperature circulation.</li><li>2. The probe port is blocked.</li><li>3. Device malfunction.</li></ol>	<ol style="list-style-type: none"><li>1. Adjust the position of the device. Leave it for a while so that the reading can stabilize.</li><li>2. Check whether the probe port is blocked. If it still doesn't work, please contact customer service.</li></ol>
Inaccurate humidity reading.	<ol style="list-style-type: none"><li>1. Water or condensation enters the probe.</li><li>2. The probe port is blocked.</li><li>3. Device malfunction.</li></ol>	<ol style="list-style-type: none"><li>1. Adjust the position of the device. Leave it for a while so that the reading can stabilize.</li><li>2. Check whether the probe port is blocked. If it still doesn't work, please contact customer service.</li></ol>

Issues	Causes	Solutions
Receiver disconnects/loses connection to Transmitter	No pairing was performed	Hold the Transmitter close to the Receiver and press the Tx button on the Transmitter
	The distance is too far to disconnect	
	The Transmitter has run out of power.	Reinstall the batteries

# Shenzhen Inkbird Technology Co.,Ltd.

support@inkbird.com

**Consignor:** Shenzhen Inkbird Technology Co., Ltd.

**Office Address:** Room 1803, Guowei Building, No.68  
Guowei Road, Xianhu Community, Liantang, Luohu District,  
Shenzhen, China

**Manufacturer:** Shenzhen Inkbird Technology Co., Ltd.

**Factory Address:** Room 501, Building 138, No. 71, Yiqing  
Road, Xianhu Community, Liantang Street, Luohu District,  
Shenzhen, China



V5.0

MADE IN CHINA

DESIGNED BY INKBIRD